

# 10 x 10 Garden Party

## Parts:

12	6'6" Galvanized Pipe
4	3'2" Galvanized Pipe
4	4 Way Corners
4	Anchor Feet
1	100% Polyester Cover/Screens
1	2-Piece Galvanized Fitting

## Instructions:

1. Arrange all pipes and fittings on the ground.
2. Insert one swaged end pipe into one long pipe. This extended pipe will be inserted into each of the corner fittings to form the length of the sides. Insert long pipe to form roof supports.
3. To form peak, insert two of the long pipe into both ends of half of the two piece center fitting. Repeat for the other cross sections. Push the pipe 3.5" into the fitting or until stops.
4. Place cover over the frame.
5. Lift one side of the frame and insert 2 long pipes for the legs. Repeat on the other side.
6. Slide one anchor foot on each leg.
7. Pull cover down on all four sides of the frame.
8. Place the D-ring that is attached to the cover over the hook of each foot. Pull strap to tighten each leg. Tighten evenly at every leg. **DO NOT OVER TIGHTEN.**
9. Attach velcro straps on the underside of the cover.
10. Use spikes (not provided) in holes of each foot. The spike should be inserted so that they cross in the ground. The spikes will give stability in low wind conditions of 10 mph or less. For higher winds we suggest screw in anchor and rope to attach to the D-ring on the cover at the top of each leg. When using D-rings to anchor the unit, make sure the straps that are attached to the inside of the cover at the D-ring are tied to the frame.
11. Attach insect screening as you would a shower curtain.
12. **ANCHORING UNITS ARE STRONGLY ADVISED! THE ANCHOR KIT IS SOLD SEPERATELY.** Anchors are not included due to the various landscapes and personal choices of each individual customer.

