

# PREMIER & DESIGNER SERIES OWNER'S MANUAL

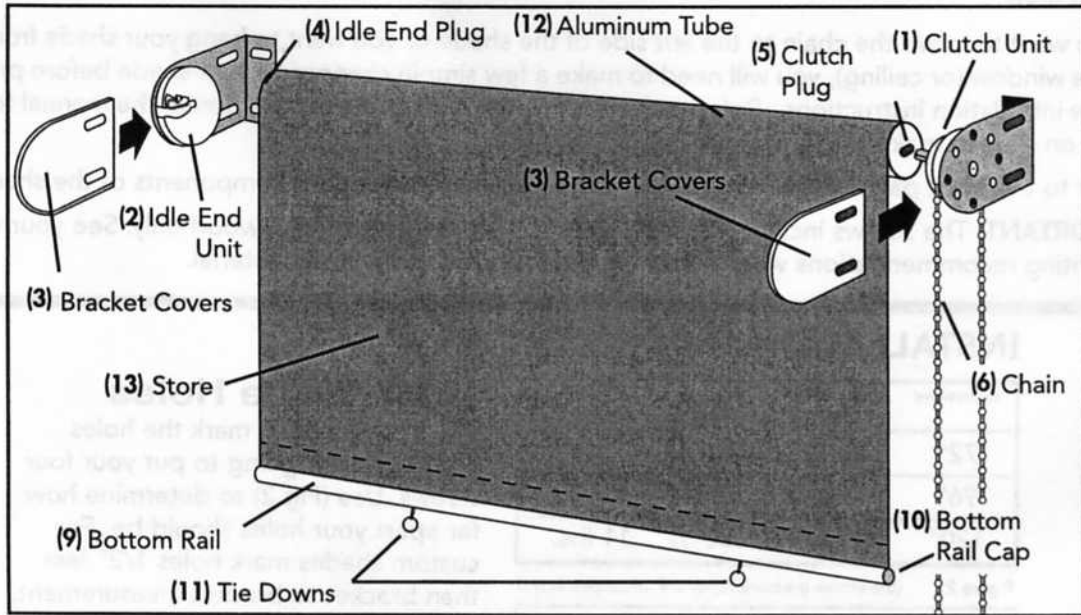


Figure 1

## PARTS LIST

The following is a complete listing of the parts needed to install your sun shade. Please inspect before beginning installation and call us if any parts are missing.

REF. NO.	PART DESCRIPTION	PART NO.	QTY. REQUIRED
1	Clutch	4-CU	1
2	Idle End Unit	4-IU	1
3	Bracket Covers	4-BC	2
4	Idle End Plug	1-IP	1
5	Clutch Plug	1-CP	1
6	Chain	4-CV-10	1
7	Tension Device (See Fig.7)	4-T	1
8	Wood Screws (See Fig. 2-5)	4-WS	5
9	Bottom Rail	1-BRS	1
10	Bottom Rail Caps	4-BRCS	2
11	Tie Downs	4-TD	2
12	Aluminum Tube	1-AT	1
13	Shade	3-S	1

Congratulations on the purchase of your Coolaroo Solar Shade. You should be proud to know you have purchased the best solar shade money can buy. We have gone to great lengths to make this instruction manual as simple and user friendly as possible. Please be sure to read the manual in its entirety before installing your shade. If after reading the manual you still have questions, please give us a call. We'll be happy to answer any of your questions. We hope you enjoy your shade!

Your shade comes standard with the chain on the right side of the shade (Fig. 1) and ready to be mounted on the inside or outside of your window. If you purchased a custom shade, or intend to keep your shade with the standard adjustments, you may skip this section and proceed to the installation instructions.

If you want to move the chain to the left side of the shade or you want to hang your shade from the top of the window (or ceiling), you will need to make a few simple changes to your shade before proceeding to the installation instructions. Refer to the **Alternate Clutch Setup** section of the manual for instructions on how to make these changes.

Refer to the front page of this manual for help identifying the various components of the shade.

**IMPORTANT:** The screws included in your hardware kit are for use with wood only. See your dealer for mounting recommendations when attaching your shade to any other material.

## INSTALLATION INSTRUCTIONS

CLOTH WIDTH	SCREWS TO SCREW MEASUREMENT	TOTAL WIDTH (INSTALLED)	APPROXIMATE WEIGHT
72"	73 1/4"	74 3/4"	7 lbs.
96"	97 1/4"	98 3/4"	9 lbs.
120"	121 1/4"	122 3/4"	11 lbs.

Figure 2 (the above measurements are for stock shades)

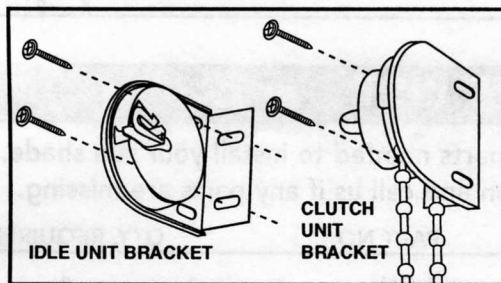


Figure 3

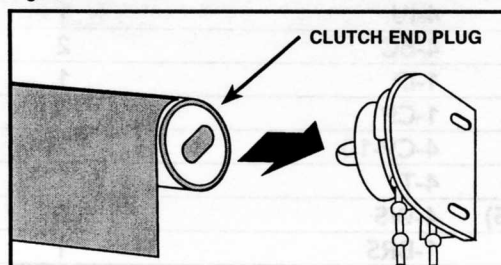


Figure 4

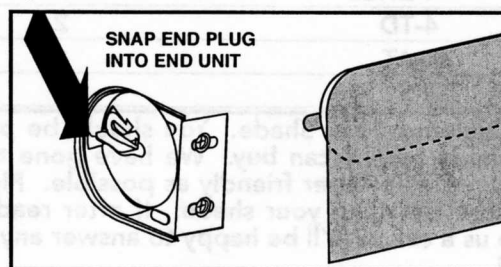


Figure 5

### 1. Mark The Holes

The first step is to mark the holes where you are going to put your four screws. Use (Fig 2) to determine how far apart your holes should be. For custom shades mark holes 1/2" less than bracket to bracket measurement.

### 2. Install Brackets

Install the Clutch and Idle End Brackets (Fig 3). The Clutch Unit Bracket will be on the right side, and the Idle End Unit Bracket should be on the left for standard installation.

**Do not tighten screws completely yet.**

### 3. Install the Shade.

First, insert the Clutch Plug into the Clutch Unit (Fig. 4).

Then insert the Idle End Plug into the Idle End Unit, and snap the Idle End Plug securely into place (Fig. 5).

With the shade in place, adjust the brackets so they fit snugly on each end of the shade.

**IMPORTANT:**

**Now go back and tighten the Bracket screws completely.**

