

SHADE INSTALLATION INSTRUCTIONS

To our valued customers:
Congratulations on your purchase of Sunsational Products shade in-a-box.
With proper care this product will provide many years of enjoyment.

PARTS LIST

SHADE SIZE	HEAD ROD CLAMPS	PULLEYS	CLEAT	#10 SCREW	PULL CORD	ALUMINUM HEAD ROD	INTERNAL CONNECTOR	STEEL BOTTOM BAR	BOTTOM BAR CONNECTOR
4'	2	3	1	6	1	2	1	2	1
6'	3	3	1	8	1	3	2	3	2
8'	4	3	1	10	1	4	3	4	3

Instructions


1. Identify all parts from parts list and gather required tools.
2. Determine shade location around window.
3. Measure and mark wall for head rod clamps six inches in from both sides of shade at top of window, making sure when pulleys are hung from hooks they fit through slots in shade top sleeve under flap.
4. Attach head rod clamps to wall making sure they are level.
5. Assemble pulleys as shown in diagram.
6. Assemble small diameter aluminum head rod pipes using internal connector(s).
7. Assemble large diameter steel bottom bars using plastic connector(s). (Use soft hammer).
8. Insert assembled head rod into small sleeve at top of shade.
9. Insert assembled bottom bar into large sleeve at bottom of shade.
10. Tie one end of pull cord to left head rod clamp hook.
11. Attach shade to wall by loosening wing nuts and sliding head rod under head rod clamp caps, then tighten wing nuts securely making sure pull cord is behind shade and pulleys hang through slots in shade under flap.
12. Route pull cord down and around bottom bar of shade, then back up under flap.

13. Route pull cord through far left pulley then next left pulley forming a loop between them. (see diagram)
14. Continue routing pull cord through right side pulley and down front of shade, then around bottom bar towards back of shade, and up to right side head rod clamp behind shade, tie end of pull cord to open hook of right side head rod clamp.

Tools Required:

Philips screw driver
Measuring tape
Level
Soft faced hammer
cement or masonry bit and #10 plugs
(for brick or concrete installation)

15. Attach cleat to wall to the left of shade between top and bottom bars at a comfortable height.
16. Pull any slack in cord between two left pulleys forming a loop and tie off to cleat. (this loop is used to raise and lower shade)
Note: to operate from right side of shade simply substitute right for left from step 10 onward.

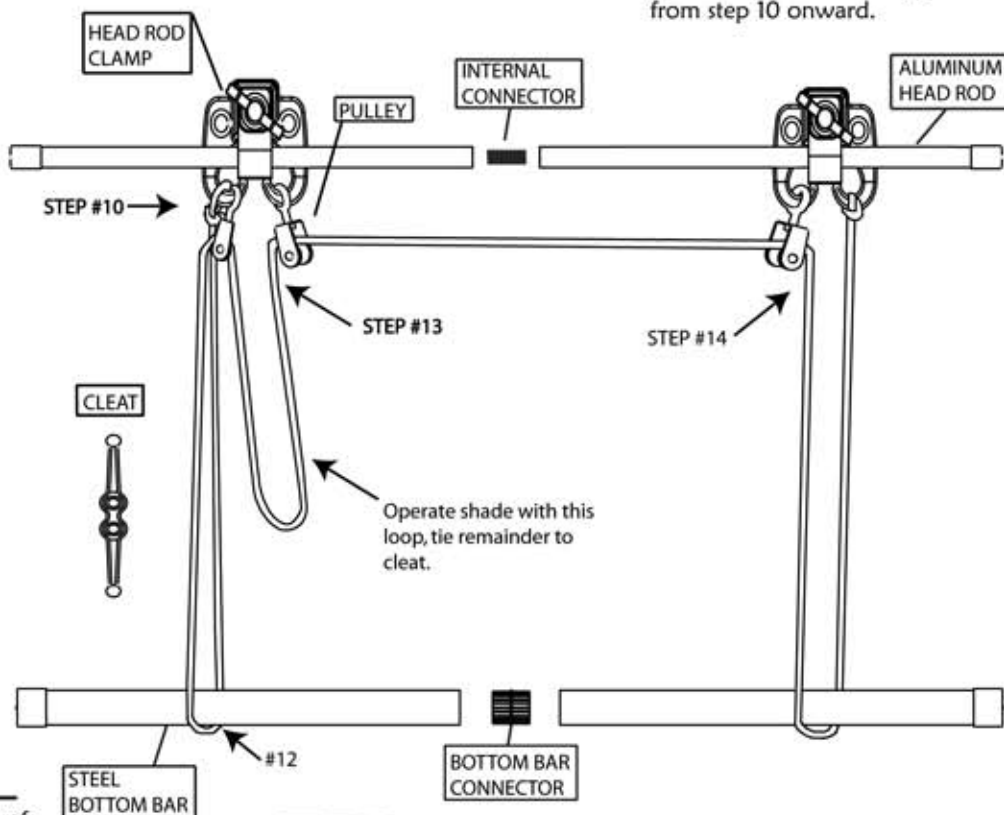

Warranty

warranted for three years from date of sale to original purchaser (receipt required) against defects in material and workmanship.

Visit us on the web at
www.sunsationalproducts.com

©2005 Sunsational Products, Inc.




1-800-950-7885

Care Instructions:

Remove during extremely windy or cold weather. If shade becomes dirty wash with water and mild soap solution and allow to air dry, 303™ Products Fabric Cleaner and Fabric Guard can be used to prolong the life of your new Shade.

SHADE
IN · A · BOX™

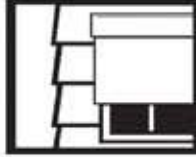

Please take a moment to review our
other fine products

More information is available on the web
at www.multi-reach.com or by calling
toll free 1-800-950-7885



Other quality products available from IDM worldwide / Multi-Reach / Sunsational Products
Awnings, Sun Shades, Outdoor Privacy Screens.....



...Full line of Medical, Janitorial, Maintenance

& Consumer Reaching Systems



Visit us on the web at
www.sunsationalproducts.com



1-800-950-7885

©2005 Sunsational Products, Inc.